

PolyBrush™



Designed & Manufactured by OPT Industries, Inc.

Developed in Partnership with The Industrial Brush Company, Inc.

PROD: PB044ZA-OG



Gentle, Non-Marking Vibratory Conveying Brush Surface


PolyBrush is the ideal replaceable brush mat for linear vibratory conveying surfaces. Sheets can be easily cut to size, facilitating usage in a variety of machines, as well as quick spot-replacement as needed. The 20° brush mat is suitable for minimum back pressure accumulation, transport-conveyors, and for sound and force dampening.

Easy to use



Cut

Easily cut panels to size with band saw, box cutter or razor. Make sure bristles are facing down!

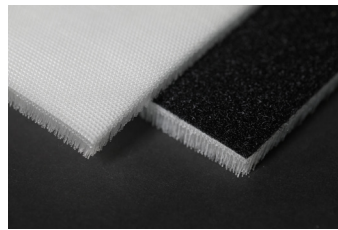


Secure

PolyBrush panels can be secured with standard methods. We recommend using hook and loop tape for optimal performance.



Replace

Spot replace as needed without installing an entirely new panel.



3/16" trim length is equivalent to Brushlon 300 series height



Cuts cleanly without risk of layer separation due to single material construction



30% bio-based materials sourced from conifer trees



Manufactured in Massachusetts, USA

Panel size	6" W x 24" L x 0.25" H (0.19" trim) (trim length is similar to Brushlon 300 series height).
Weight capacity	Recommended to run parts weighing 40g (1.41 oz) or less.
Temperature guidance	PolyBrush should be kept at 16-55°C (61 - 131°F).
Solvents	Avoid prolonged contact with organic solvents and oil-based liquids. We recommend only using water-based coolants.

Get your products moving today!
Reach out to us at polybrush@indbrush.com to learn more.