

# PolyBrush™


Designed & Manufactured by OPT Industries, Inc.  
PROD: PB044ZA-MB



## Gentle, Non-Marking Vibratory Conveying Brush Surface


PolyBrush is the ideal replaceable brush mat for linear vibratory conveying surfaces. Sheets can be easily cut to size, facilitating usage in a variety of machines, as well as quick spot-replacement as needed. The 20° brush mat is suitable for minimum back pressure accumulation, transport-conveyors, and for sound and force dampening.

### Easy to use

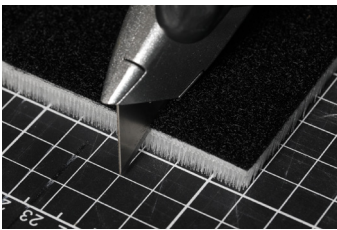

#### Cut

Easily cut panels to size with band saw, box cutter or razor. Make sure bristles are facing down!

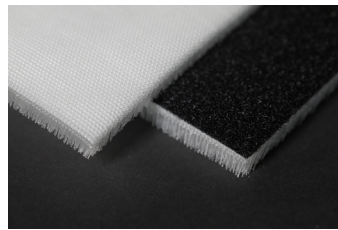

#### Secure

PolyBrush panels can be secured with standard methods. We recommend using hook and loop tape for optimal performance.




#### Replace

Spot replace as needed without installing an entirely new panel.

Panel size	6" W x 24" L x 0.25" H (0.19" trim) (trim length is similar to Brushlon 300 series height).
Installation	Minimize gaps between sheets and avoid installing in large "drop" zones.
Temperature guidance	PolyBrush should be kept at 16-55°C (61 - 131°F).
Solvents	Avoid prolonged contact with organic solvents and oil-based liquids. We recommend only using water-based coolants.

**Get your products moving today!**  
Reach out to us at [polybrush@optindustries.com](mailto:polybrush@optindustries.com) to learn more.



3/16" trim length is equivalent to Brushlon 300 series height



Cuts cleanly without risk of layer separation due to single material construction



30% bio-based materials sourced from conifer trees



Manufactured in Massachusetts, USA